



M1圖片下載SOP

圖片下載教學（初版）


前置作業

使用網路線，連接電腦網路孔與熱顯網路孔（LAN），接上後後連接口會亮綠燈。



圖片下載工具使用說明

登入介面：輸入設備IP地址（預設為192.168.1.19），登陸使用者名稱、密碼（預設皆為admin）

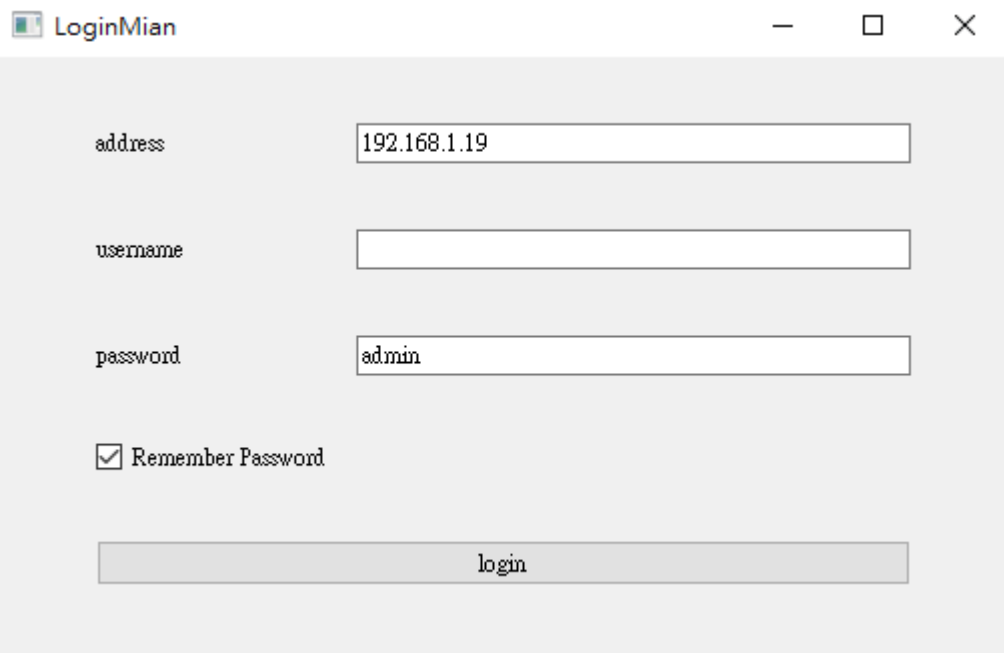

The screenshot shows a web browser window titled "LoginMian". The login form contains the following elements:

- address**: Input field containing "192.168.1.19"
- username**: Empty input field
- password**: Input field containing "admin"
- Remember Password
- login**: Submit button

主介面介紹

01 選擇時間

(a) 選擇需要查詢時間，時間目前只能查詢單天，無法同時多天查詢。

02 選擇照片類型

(b)
Normal = 正常
Anomalous = 體溫異常
Nomask = 未配戴口罩

03 儲存目錄選取

(c) Storage dir = 儲存目錄選取
(d) Previous Page = 前一頁
(e) Next Page = 下一頁
(f) Connected = 連線中

The screenshot shows the 'Export Tool' interface. At the top, there are several controls: 'Choice Time' (a) is a dropdown menu set to '2021.10.16'; 'Choice Type' (b) is a dropdown menu with 'Normal' selected; 'Storage Dir' (c) is a text input field containing 'D:/AlarmPic'; 'Previous Page' (d) and 'Next Page' (e) are buttons; 'Search' is a button; 'Connected' (f) is a radio button; 'download all' and 'download page' are buttons. Below these controls is a table with 16 rows of image URLs. The first row is highlighted in blue.

1	http://192.168.1.19/data/2021/10/16/image/16/1900_stranger_1634402383534288_0.00.jpg
2	http://192.168.1.19/data/2021/10/16/image/16/1886_stranger_1634402076467004_0.00.jpg
3	http://192.168.1.19/data/2021/10/16/image/16/1885_stranger_1634402062056375_0.00.jpg
4	http://192.168.1.19/data/2021/10/16/image/16/1882_stranger_1634401986360299_0.00.jpg
5	http://192.168.1.19/data/2021/10/16/image/16/1866_stranger_1634401885725873_0.00.jpg
6	http://192.168.1.19/data/2021/10/16/image/16/1859_stranger_1634401784010592_0.00.jpg
7	http://192.168.1.19/data/2021/10/16/image/16/1855_stranger_1634401730010600_0.00.jpg
8	http://192.168.1.19/data/2021/10/16/image/16/1853_stranger_1634401703390902_0.00.jpg
9	http://192.168.1.19/data/2021/10/16/image/16/1852_stranger_1634401690701575_0.00.jpg
10	http://192.168.1.19/data/2021/10/16/image/16/1851_stranger_1634401679933528_0.00.jpg
11	http://192.168.1.19/data/2021/10/16/image/16/1850_stranger_1634401673168815_0.00.jpg
12	http://192.168.1.19/data/2021/10/16/image/16/1841_stranger_1634401664161860_0.00.jpg
13	http://192.168.1.19/data/2021/10/16/image/16/1838_stranger_1634401654834962_0.00.jpg
14	http://192.168.1.19/data/2021/10/16/image/16/1839_stranger_1634401653914273_0.00.jpg
15	http://192.168.1.19/data/2021/10/16/image/16/1836_stranger_1634401646268590_0.00.jpg
16	http://192.168.1.19/data/2021/10/16/image/16/1826_stranger_1634401626854267_0.00.jpg

預覽圖片

預覽圖片

滑鼠單擊左鍵，會顯示出預覽圖片，
圖片於5秒後自動關閉。

	1
1	http://192.168.1.19/data/2021/10/16/image/16/1903_stranger_1634402401387563_0.00_
2	http://192.168.1.19/data/2021/10/16/image/16/1893_stranger_1634402359996912_0.00_
3	http://192.168.1.19/data/2021/10/16/image/15/1494_stranger_1634398826061133_0.00_
4	http://192.168.1.19/data/2021/10/16/image/14/1298_stranger_1634396115414713_0.00_
5	http://192.168.1.19/data/2021/10/16/image/14/1284_stranger_1634395962461484_0.00_
6	http://192.168.1.19/data/2021/10/16/image/14/1244_stranger_1634395531262326_0.00_
7	http://192.168.1.19/data/2021/10/16/image/14/1180_stranger_1634394585762477_0.00_
8	http://192.168.1.19/data/2021/10/16/image/14/1076_stranger_1634392815852416_0.00_
9	http://192.168.1.19/data/2021/10/16/image/09/29_stranger_1634378270125781_0.00.jpg
10	http://192.168.1.19/data/2021/10/16/image/09/2_stranger_1634377516968290_0.00.jpg
11	
12	
13	
14	
15	
16	

照片下載

單一和全部下載

單一下載

點選要的照片，按下滑屬右鍵，即可
下載

全部下載或下載當前頁面

點選右上角的按鈕

Download all = 下載全部

Download page = 下載當前頁面

The screenshot shows the 'Export Tool' window. At the top, there are controls for 'Choice Time' (set to 2021.10.16), 'Choice Type' (set to NoMask), a 'Search' button, 'Previous Page' and 'Next Page' buttons, and a page number '1'. Below these is the 'Storage Dir' field (D:/AlarmPic) and two buttons: 'download all' and 'download page'. The main area contains a table with 12 rows of image URLs. The first row is highlighted in blue, and a context menu with a 'Download' button is visible over it.

	1	1
1	http://192.168.1.19/data/2021/10/16/image/16/1903_stranger_16344024013	http://192.168.1.19/data/2021/10/16/image/16/1903_stranger_1634402401387563_0.00_r.jpg
2	http://192.168.1.19/data/2021/10/16/image/16/1893_stranger_1634402359996912_0.00.jpg	http://192.168.1.19/data/2021/10/16/image/16/1893_stranger_1634402359996912_0.00_r.jpg
3	http://192.168.1.19/data/2021/10/16/image/15/1494_stranger_1634398826061133_0.00.jpg	http://192.168.1.19/data/2021/10/16/image/15/1494_stranger_1634398826061133_0.00_r.jpg
4	http://192.168.1.19/data/2021/10/16/image/14/1298_stranger_1634396115414713_0.00.jpg	http://192.168.1.19/data/2021/10/16/image/14/1298_stranger_1634396115414713_0.00_r.jpg
5	http://192.168.1.19/data/2021/10/16/image/14/1284_stranger_1634395962461484_0.00.jpg	http://192.168.1.19/data/2021/10/16/image/14/1284_stranger_1634395962461484_0.00_r.jpg
6	http://192.168.1.19/data/2021/10/16/image/14/1244_stranger_1634395531262326_0.00.jpg	http://192.168.1.19/data/2021/10/16/image/14/1244_stranger_1634395531262326_0.00_r.jpg
7	http://192.168.1.19/data/2021/10/16/image/14/1180_stranger_1634394585762477_0.00.jpg	http://192.168.1.19/data/2021/10/16/image/14/1180_stranger_1634394585762477_0.00_r.jpg
8	http://192.168.1.19/data/2021/10/16/image/14/1076_stranger_1634392815852416_0.00.jpg	http://192.168.1.19/data/2021/10/16/image/14/1076_stranger_1634392815852416_0.00_r.jpg
9	http://192.168.1.19/data/2021/10/16/image/09/29_stranger_1634378270125781_0.00.jpg	http://192.168.1.19/data/2021/10/16/image/09/29_stranger_1634378270125781_0.00_r.jpg
10	http://192.168.1.19/data/2021/10/16/image/09/2_stranger_1634377516968290_0.00.jpg	http://192.168.1.19/data/2021/10/16/image/09/2_stranger_1634377516968290_0.00_r.jpg
11		
12		

下載照片後查詢溫度

查詢溫度

下載下來後的照片並無溫度紀錄，溫度查詢需回到熱顯前台，點選至當天溫度即可找到此照片溫度記錄。

The screenshot displays the Planck Vision Systems software interface. At the top right, the date and time are 2021-08-23 15:08:01. The Planck Vision Systems logo is in the top right corner. A large green shield icon with a checkmark is on the right side. Below it, a temperature of 37.3°C is shown. At the bottom right, there are two rows of status indicators: a red triangle with a white exclamation mark and the number 0, and a group of three white people icons with the number 3. The main area shows a grid of 10 thermal images of a person's face, each with a timestamp and temperature reading. A modal window titled '警報圖片' (Alert Images) is open, showing a search filter for '2021.08.23' and a list of 10 images with their respective timestamps and temperatures. The temperatures range from 36.3°C to 37.1°C. The status of each image is '正常' (Normal) or '未戴口罩' (Not wearing a mask).

Time	Temperature
2021-08-23 15:05:56	37.1°C
2021-08-23 15:05:49	36.2°C
2021-08-23 09:38:03	36.9°C
2021-08-23 09:35:32	36.4°C
2021-08-23 09:30:42	36.3°C
2021-08-23 09:27:36	36.5°C
2021-08-23 09:27:10	36.5°C
2021-08-23 09:26:54	36.5°C
2021-08-23 09:25:37	36.4°C
2021-08-23 09:25:27	36.4°C



謝謝您得觀看

我們下次再見